 


PARTS FOR WALTHER P-38

**AUTO
PISTOL**

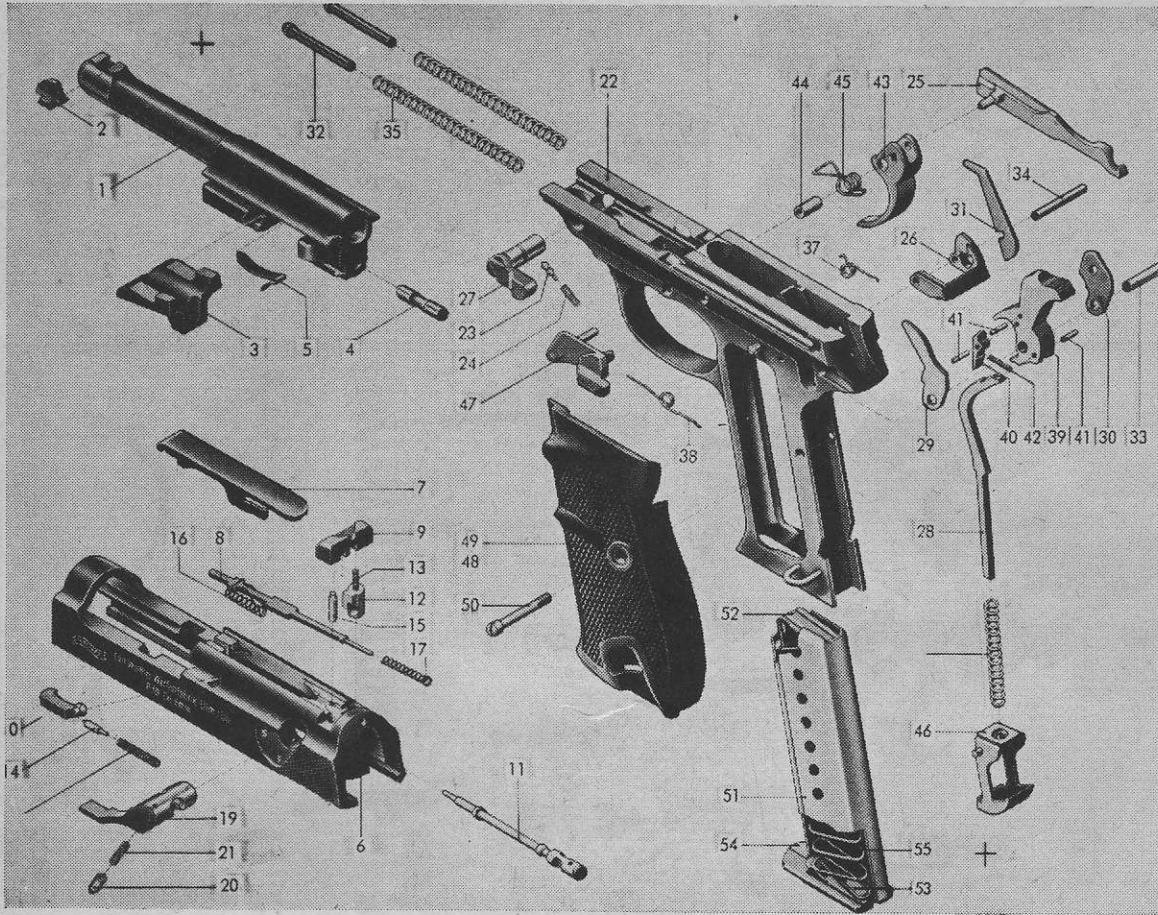

Parts List for WALTHER P-38 Auto. 9m/m Luger.

**Group #1—Barrel assembly complete—
consisting of:**

No. 1-5 barrel with housing, front sight, locking piece, pin and spring\$42.00

Group #2—Slide Unit

No. 6 Slide body\$42.00
 7 Slide cover 2.75
 8 Signal pin 1.00
 9 Rear Sight 4.00
 10 Extractor 3.50
 11 Firing pin 2.50
 12-13 Firing pin lock with spring 2.25
 14 Extractor pin50
 15 Limit stop pin50
 16 Firing pin spring50

17 Signal pin spring\$.50
 18 Extractor spring50
 19-21 Safety lever unit including rest pin and spring 5.00

Group #3—Frame

No. 22-24 Frame with rest pin and spring\$45.00
 25 Trigger connector 4.50
 26 Cocking piece 5.00
 27 Barrel catch lever 4.00
 28 Striker rod 2.00
 29 Relief piece 2.00
 30 Release lever 1.75
 31 Ejector 1.00
 32 Guide pins for recoil springs .75
 33 Hammer pin50
 34 Cocking piece pin50

35 Recoil spring (2) each\$.50
 36 Striker rod spring50
 37 Trigger rod spring50
 38 Cocking piece spring50
 39 Hammer including the following: 40, 41, 42 hammer trap, 2 pins & trap spring 12.50
 43 Trigger 5.50
 44 Sleeve50
 45 Trigger spring50
 46 Magazine holder 2.75
 47 Catch lever 6.50
 48 Left grip 1.75
 49 Right grip 1.75
 50 Buttplate screwseach .50

Group #4—Magazine

51-55—Magazine complete\$ 8.00